


Quick Tips

HOW TO SELECT A LINTEL




A Tata Steel Enterprise


To select a lintel you'll need to know:

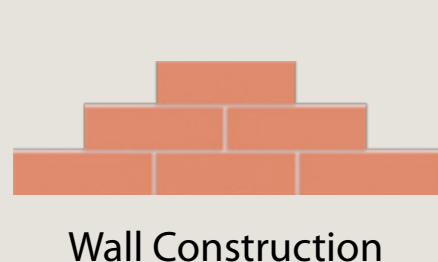

Wall Construction

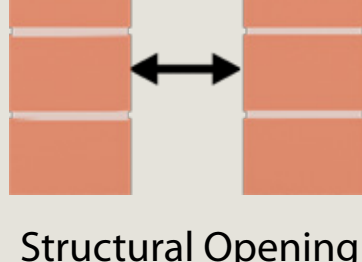


Structural Opening

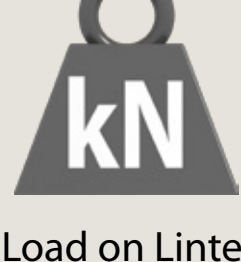


Load on Lintel

Step 1

WALL CONSTRUCTION

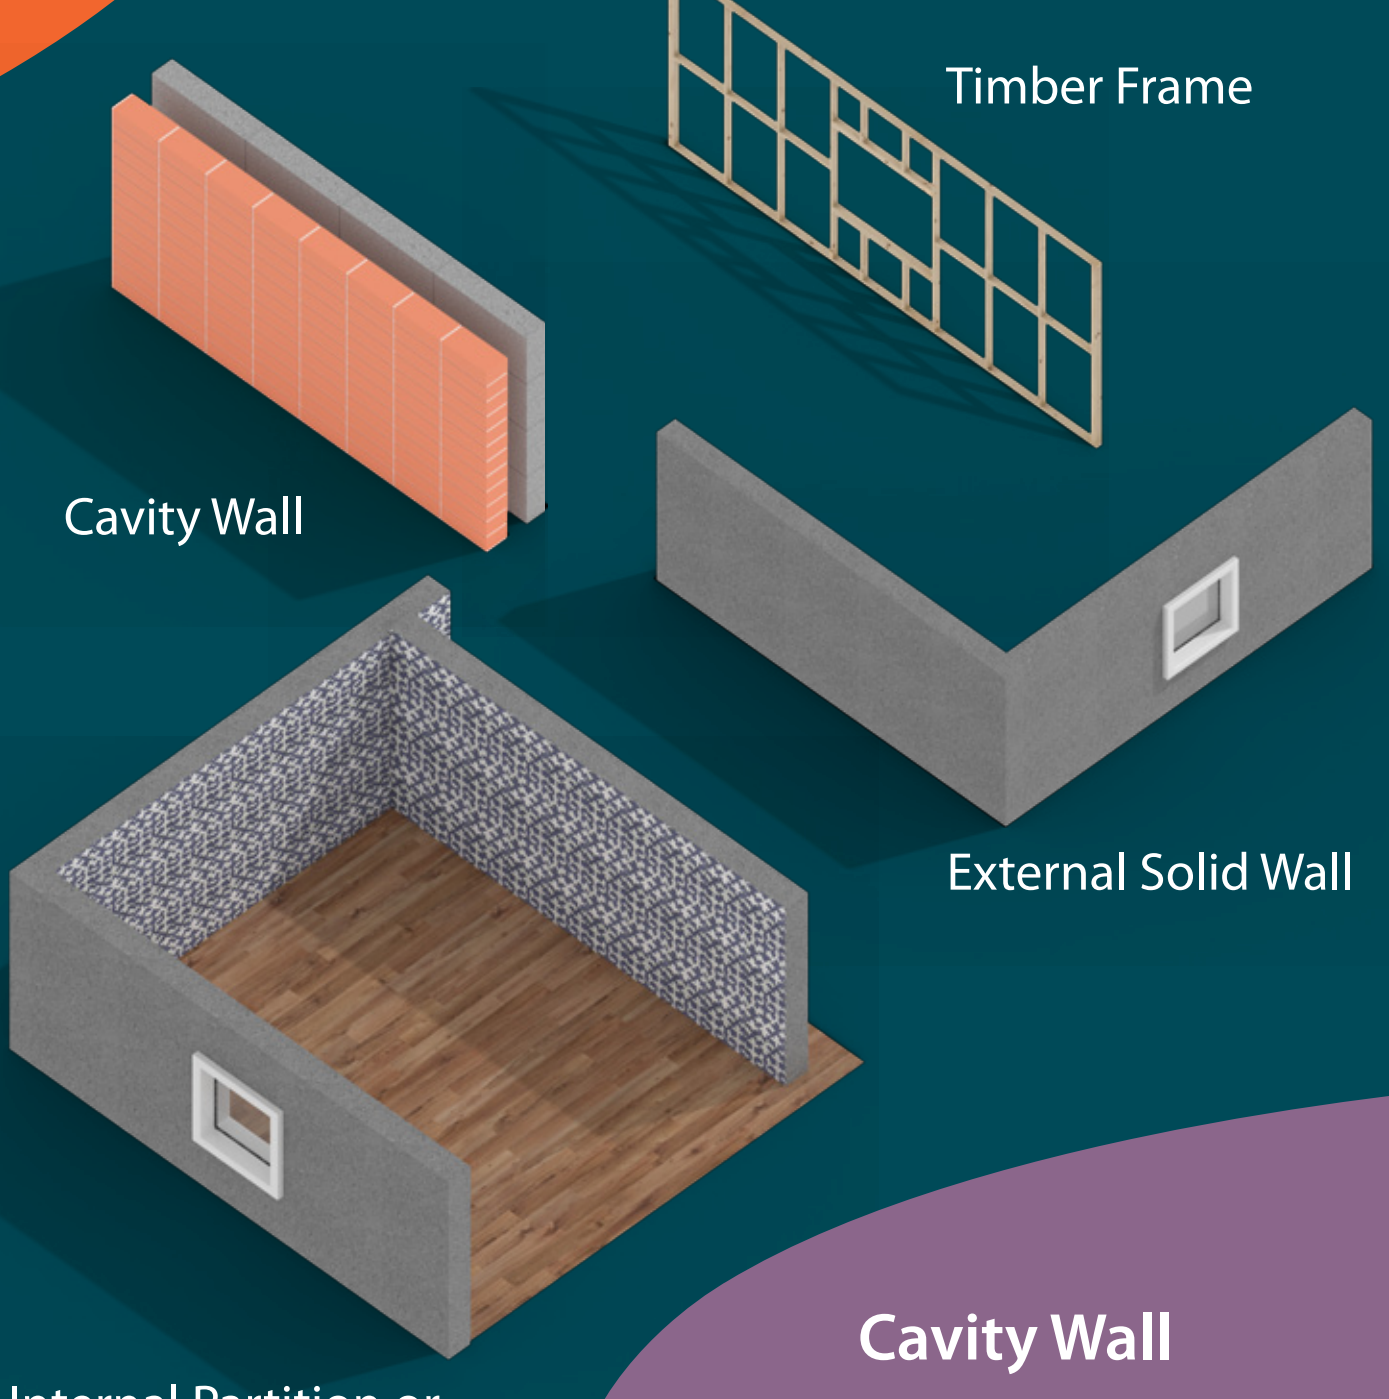


Internal Partition or Load Bearing Wall

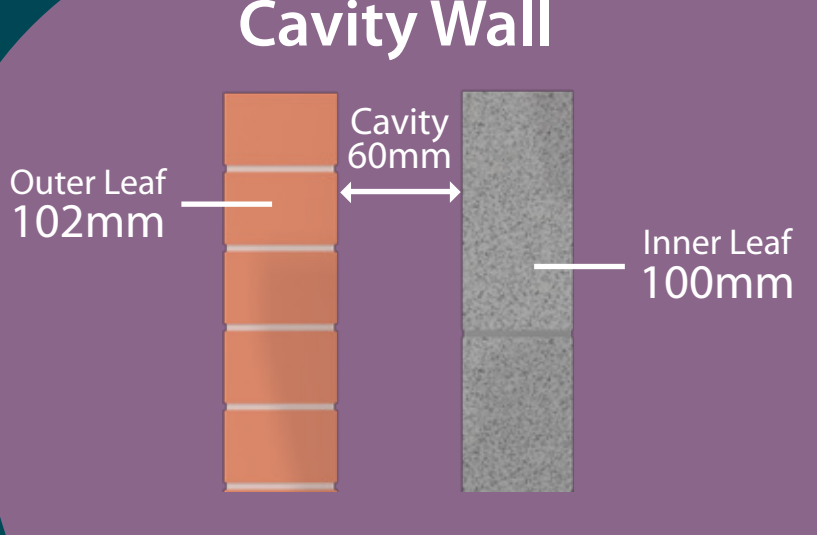



Step 2

STRUCTURAL OPENING

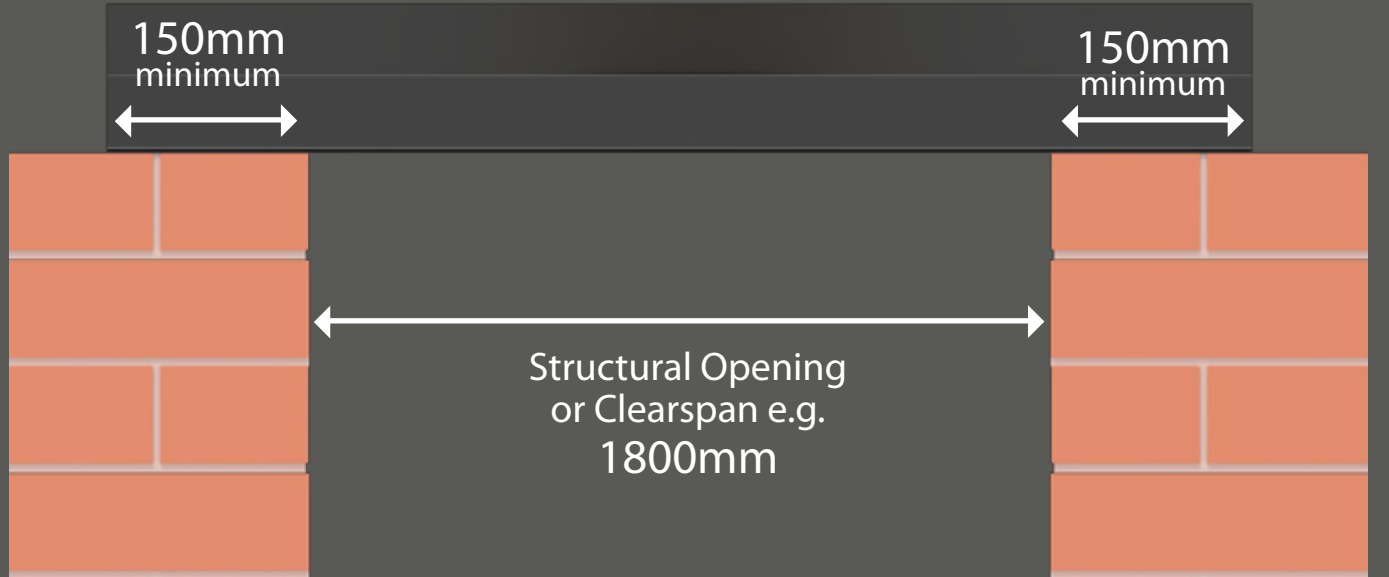


Step 3

LOAD ON LINTEL

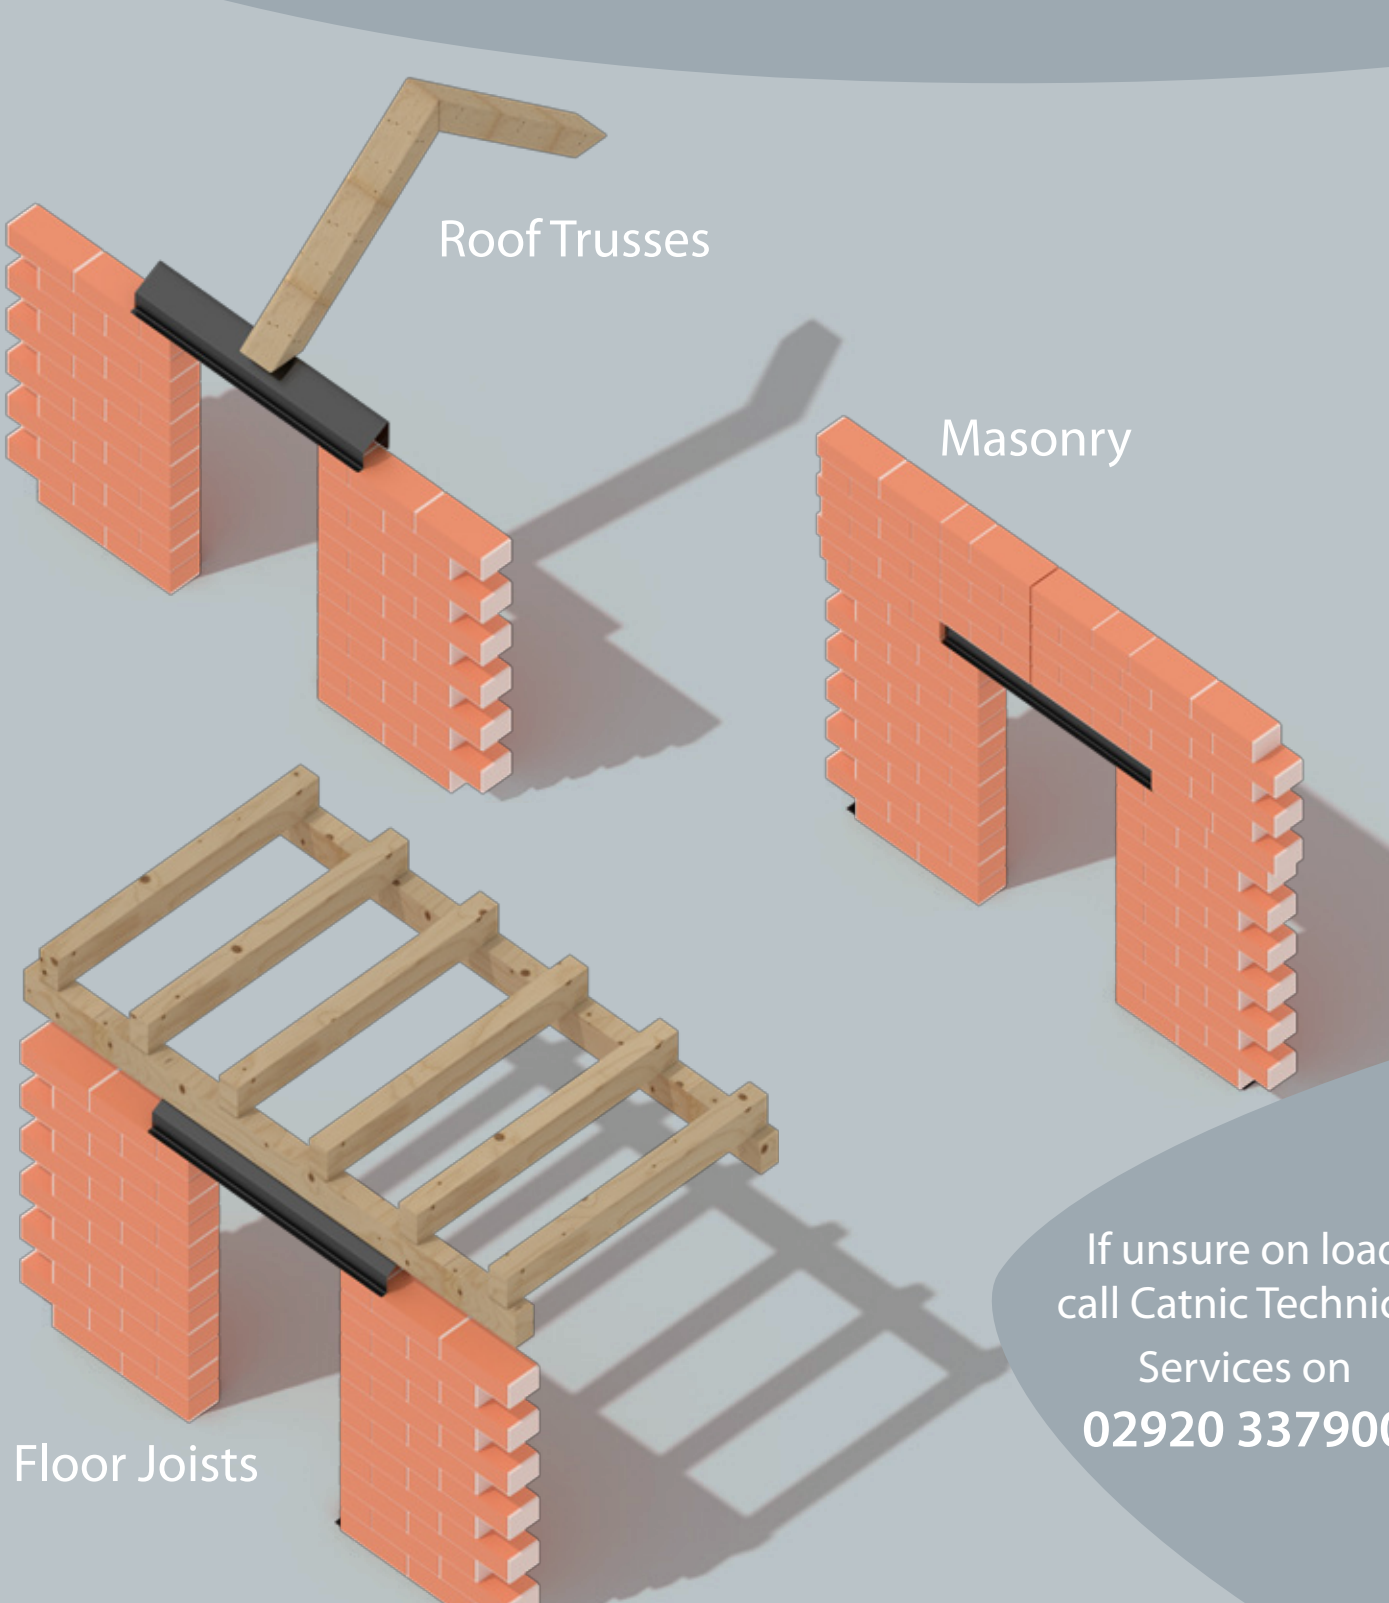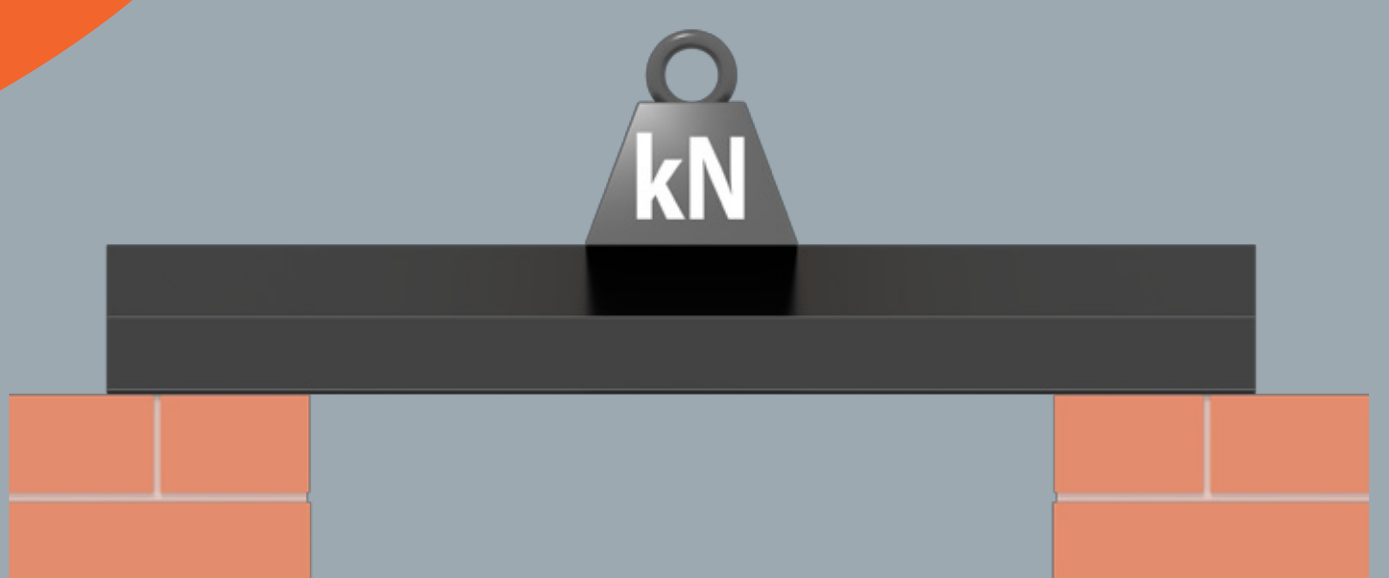


If unsure on load call Catnic Technical Services on 02920 337900

Once you have:

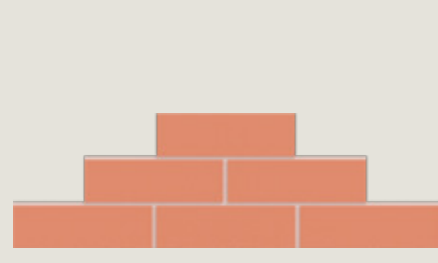

Wall Construction

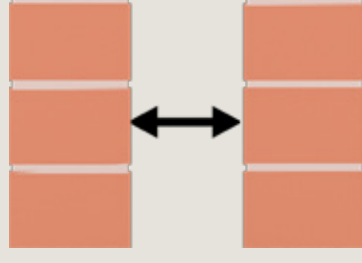

Structural Opening



Load on Lintel

You can choose what type of Lintel to use

www.catnic.com

FOR MORE INFORMATION