


Basic Fitting Guides


Rolled Lead Sheet to BS EN 12588

Ridge saddles


A. Ridge saddle at abutment (bossed)

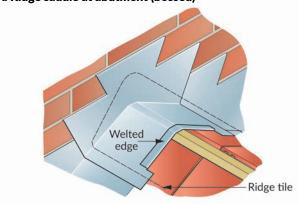

B. Ridge saddle at abutment (lead-welded)

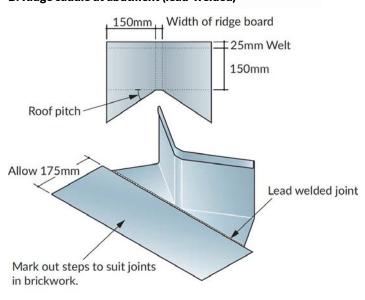

C. Ridge saddle at the top of a valley

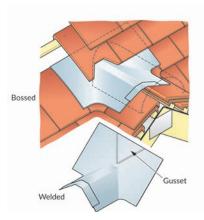


Saddle may be bossed for shallow pitches or welded for either shallow or steeply pitched roofs.

Ridge and hip flashings


A. Cross section

No ridge flashing to exceed 1.5m in length for Code 4 and 2m in length for Codes 5, 6, 7, and 8.




* Roll fixed 5mm (MIN) above slate line

B. Ridge flashing

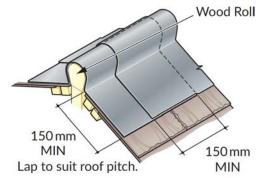

Free edges clipped to suit exposure using Copper Strip or Permastrip.

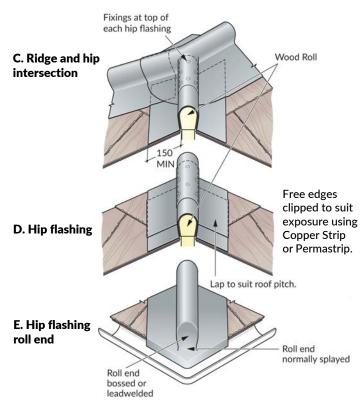

Peartree Lane, Welwyn Garden City, Hertfordshire AL7 3UB

Freephone: 0800 117 882 | Freefax: 0800 575 092



